



The quick guide provides the most important information on operating the eNetMini in a compact format.



Further descriptions can be found at www.enetmini.com

Package contents

- 1x eNetMini
- 4x Spacer
- 1x Quick Guide
- 1x Label with mDNS-Address
- Optional:
 - 1x Magnet
 - 1x Housing (housing base, housing cover, sensor cover)

Delivery Status

Network, RJ45, 10/100 MBit	
IP-Address, IP-Mask ¹	DHCP (192.168.015.100 / 24)
mDNS-Address	Label
Administrator username ¹	user_su
Administrator password ¹	pass_su

Recycling

To minimize its environmental impact, the product must be treated in accordance with European Directive 2012/19/EU in order to be recycled or dismantled. The user has the choice of returning the product to a competent recycling organization or to the retailer when purchasing a new electrical or electronic device.

Conformity

	CE Note: When used in a private environment, the product may cause electromagnetic interferences
	RoHS compliant
	REACH compliant

¹Changeable



You can find more information about our products and services at www.enetmini.com



Safety note


Please read and follow the following safety instructions when using the appliance. We cannot guarantee that improper use of the appliance will not result in accidents or damage. Please use this product with care and at your own risk.

	Keep the device away from water, fire, moisture or hot environments.
	Do not attempt to disassemble, repair or modify the device.
	Do not use damaged cables with the device.
	Do not operate the device outside the device specifications.

Orientation

The motion sensor and ambient light sensor should be aligned in the direction of the source to be measured.

The steeper the angle, in which the light rays fall on the light sensor, the stronger the deflection.

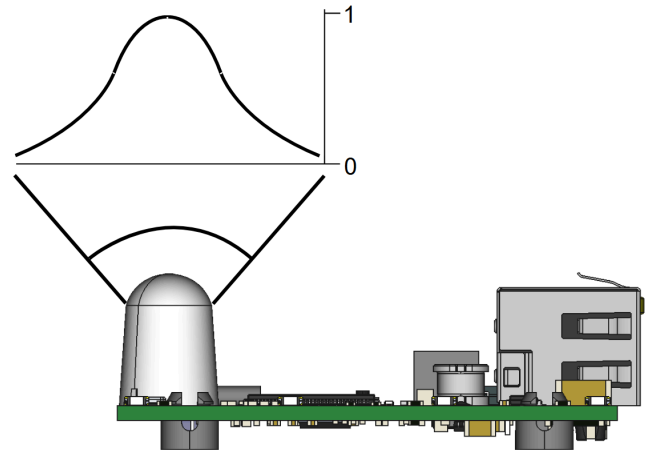

Assembly

Before commissioning the eNetMini, ensure that it is securely positioned or fastened.

To do this, insert the four spacers into the holes provided and screw it down if necessary. Alternatively, you can use separately purchased housing.

The eNetMini can be operated in all positions. However, precise alignment may be required for the desired functionality of the sensors.

When installing the network cable, make sure that the plug snaps into the sockets.

Positioning

The measured temperature and humidity values may deviate from the environment if the circuit board is placed in a location without air circulation.

Furthermore, an air flow that is directed straight at the pressure sensor can falsify the measurement



You can find more information about our products and services at www.enetmini.com

